## **USING THE DVD**





The DVD player is located in the shelf unit below the TV. It is permanently fixed into the unit and does not need to be adjusted in any way.

**POWER ON** The power should be on, just turn on the DVD player, if it has

been turned off it is located at the rear of the shel unit

**VISION** Simply choose the source on the projector or TV for the DVD to

be shown on either device.

The TV and Projector are turned on at the socket behind the TV.



**SOUND** For sound please use the DVD chanel on the mixing desk.

USB You can also insert a USB stick and run a slide show through the

DVD player

